

IPHONE TOUCH

TOUCH WITH IC

I PHONE X (IC)	400
I PHONE XR (IC)	500
I PHONE XS MAX (IC)	470
I PHONE XS (IC)	400
I PHONE 11 (IC)	550
I PHONE 11 PRO (IC)	530
I PHONE 11 PROMAX (IC)	550
I PHONE 12 (IC)	570
I PHONE 12 PRO (IC)	570

TOUCH (NEW)

I PHONE 12 PROMAX	1150
I PHONE 13	1150
I PHONE 13 PRO	1450
I PHONE 13 PROMAX	1650
I PHONE 14	1150
I PHONE 14 PRO	1700
I PHONE 14 PROMAX	2000
I PHONE 15	1360
I PHONE 15 PRO	1700
I PHONE 15 PROMAX	2410

TOUCH NO IC

I PHONE 11	500
I PHONE 11 PRO	500
I PHONE 11 PROMAX	530
I PHONE 12	570
I PHONE 12 MINI	600
I PHONE 12 PRO	570
I PHONE 12 PROMAX	650
I PHONE 13	720
I PHONE 13 PRO	760
I PHONE 13 PROMAX	770
I PHONE 14	720
I PHONE 14 +	1000
I PHONE 14 PRO	1000
I PHONE 14 PROMAX	1100
I PHONE 15	1050
I PHONE 15 +	1130
I PHONE 15 PRO	1230
I HPONE 15 PROMAX	1230